CGDI BMW F series enable & disable key guide

1. CGDI BMW F series enable the key guide

After connecting the CGDI BMW and vehicle via OBD, click on "BMW enable/disable key".



Click on "Display key information".

BMW Enable/Disable ke	y Feature ve	rsion:0001 _ ×
VIN:	Current ke	ey number:
Car Series:		
Key Number Key type	Kay Status	
О кеуl		
O Rey2		
О көуз		
O Rey4		
O Royb		
О Кнул		
O Koy/		
О кнуя		
O Koyy		
О Кну10		
Display key information	Disable the key	Enable the key
Click on "Display key	information"	

Read succeed

BMW Enable	/Disable)	key Feat	ure version:0001 _ ×
VIN	: LEV8W3105H	MH18553 Cu	rrent key number: None
Car Series	: F series		
Key Number	Key type	Key Status	
🔿 көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti
@ Key2	Used	Enabled	on is successful
⊙ кеуз	Unused	Enabled	
O Rey4	Unused	Enabled	
О Коуь	Unucod	Fnabled	
🔿 Кнуб	Unused	Enaclod	
O Key/	Unused	Fnabled	
О кнуя	Unused	Enabled	
О Ксуч	Unused	Enabled	
⊙ вну10	Unused	Enabled	
Display ke informatio	ay an	Disable t	he key Enable the key
Read	ding succeed	d.	

Choose the key position you want to enable and click on "Enable the key".

BMW Enable	/Disable .	key Feat	ture versio	m:0001	- ×
VII Car Series	1: LEV8W3105 5: F series	MH18553 Cu	rrent key nu	anber: None	
Key Number	Key type	Key Status	-		
О Көуl	Used	Enabled	OBD is com OBD KWP CAN	necting 500kbps cor	mecti
Rey2	Used	Enabled	on is succe	ostul	
О көуз	Unused	Enabled			
O Rey4	Unused	knabled			
O Keys	Unused	Fnabled			
О Кнуб	Unuse:1	Enabled			
O Key/	Unused	Fnabled			
ОКнув	Unused	Enabled			
O Koyy	Unuced	Enabled			
О Кну10	Unused	Enabled			-
Display ko	on on	Disable t	he key	Enable th	e key
Choose	the key post	ion you want to e	enable.		

EMW Enable/Disable key Feature version:0001 _ ×				
VIN: LEV8W3105HMH18553 Current key number: None				
Car Series	: F series			
Key Number	Key type	Key Status		
🔿 көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti	
⊛ Key2	Used	Enabled	on is successful	
О кеуз	Unused	Enabled		
O Key4	Unused	Enabled		
O Koys	Unucod	Enabled		
🔿 Кнуб	Unused	Enabled		
O Koy/	Unuced	Fnabled		
О кнув	Unused	Enablod		
О Ксуч	Unuced	Fnabled	•	
О Кну10	Unused	Enabled		
Display ke	y n	Disable t	he key Enable the key	
Click on	"Enable the l	key".		

Put the key vertically in the key induction area of the direction column





Enable the key successfully



2. CGDI BMW disable F series key Guide

After connecting the CGDI BMW and vehicle via OBD, click on "BMW enable/disable key".



Click on "Display key information ".

BMW Enable/Disable ke	y Feature ve	rsion:0001 _ ×
VIN:	Current ke	ey number:
Car Series:		
Key Number Key type	Kay Status	
О кеуl		
O Rey2		
О көуз		
O Rey4		
O Royb		
О Кнул		
O Koy/		
О кнуя		
O Koyy		
О Кну10		
Display key information	Disable the key	Enable the key
Click on "Display key	information"	

Read succeed

BMW Enable	/Disable)	key Feat	ure version:0001 _ ×
VIN	: LEV8W3105H	MH18553 Cu	rrent key number: None
Car Series	: F series		
Key Number	көү түрө	Key Status	
🔿 көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti
@ Key2	Used	Enabled	on is successful
⊙ кеуз	Unused	Enabled	
O Rey4	Unused	Enabled	
O Koys	Unused	Fnabled	
О Кнуб	Unused	Enacled	
O Key/	Unused	Fnabled	
О кнуя	Ппине:1	Enabled	
O Koyy	Unuced	Enabled	
⊙ вну10	Unused	Enablod	-
Display ko informatio	on on	Disable t	he key Enable the key
Rea	ding succeed	J.	

Choose the key position you want to disable

Car Series	: F series		
ey Number	Key type	Key Statue	
көуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti
Key2	Used	Enabled	on is successful
көуз	Unused	Enabled	
Rey4	Unused	Enabled	
Koy5	Unused	Fnabled	
Кнуб	Unused	Enaclod	
Key/	Unuced	Fnabled	
Кнув	Unused	Enacled	
Koyy	Unuced	Fnabled	
8ey10	Unused	Enablod	
Display ke	ογ	C	

Click on "Disable the key".

BMW Enable	/Disable)	key Feat	ure vers	ion:0001	_ ×	
VIN	: LEV8W3105F	MH18553 Cu	rrent key	number: None		
Car Series	: F series					
Key Number	Key type	Key Status	-			
О Кеуl	Used	Enabled	OBD is co OBD KWP C	onnecting AN 500kbps co	mnecti	
Key2	Used	Enabled	on is successful			
О кеуз	Unused	Enabled				
O Key4	Unused	Enabled				
O Koyb	Unuced	Fnabled				
О Кнуб	Thuse:1	Enacled				
O Key/	Unucod	Fnabled				
О Кнуя	Unuse:1	Enabled				
О Ксуч	Unucod	Enabled				
О Вну10	Unused	Enaclod	V			
Display ko informatio	ey on	Disable t	he key	Enable t	ne key	
Clic	k on "Disable	e the key".				

Disable the key successfully

BMW Enable.	/Disable)	key Feat	ture version:0001 _ ×
VIN	: LBV8W3105H	MH18553 Cu	rrent key number: None
Car Series	:F series		
Key Number	Key type	Key Status	
🔿 кеуі	Used	Enabled	OBD is connecting OBD KWP CAN 500kbps connecti
Rey2	Used	Disabled	on is successful Disable key successful
⊙ көуз	Unused	Enabled	
O Rey4	Unused	Enabled	
O Koys	Unused	Enabled	
О Кнуб	Unused	Enabled	
O Key/	Unused	Fnabled	
О Кнув	Unused	Enabled	
O Koyy	Unused	Fnabled	
○ Кну10	Unused	Enablod	
Display ke	y n	Disable t	he key Enable the key
Disabl	e key succe	ed	